

EXTREME STEAM HANDHELD STEAMER

콘에어 익스트림 스팀 핸드형 스티머



INSTRUCTION
BOOKLET
사용설명서

CONAIR®

GS39K

CONAIR HANDHELD FABRIC STEAMER

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

SAFETY PRECAUTIONS

WARNING: The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children. Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.

WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



- If you are using the unit in a bathroom, unplug it after you have finished using it. Using the unit close to a source of water can, in fact, be dangerous, even if the unit is switched off. To ensure additional protection, have installed in your bathroom a residual current device (RCD) with a nominal trip current no higher than 30 mA. Ask your electrical fitter for advice.
- Never immerse the unit in water or any other liquid.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not use the unit if it has fallen or if it appears to be damaged.
- Do not leave the unit unattended when it is plugged in or switched on.
- Unplug the unit immediately if you have problems when using it.
- Do not use any accessories other than those recommended by manufacturer.
- Unplug the unit after each use and before filling or cleaning it.
- This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by persons who lack experience or knowledge, unless they are supervised or have been given instructions beforehand on the use of the unit by a person responsible for their safety. Children should be supervised to make sure they do not treat the unit like a toy.
- Allow the unit to cool before storing.
- To prevent damage to the cord, do not wrap it around the unit and ensure it is stored without twisting or folding it.
- When emitting steam, this appliance may cause burns if it is used too close to the skin or eyes, or if it is used incorrectly. To reduce the risk of contact with hot water emitting from the steam vents, test appliance before use by holding it away from the body.
- Do not steam garments while on a person.
- Burns could occur from touching hot metal parts, hot water or steam. Use care when you turn steam appliance upside down.
- Use of an extension cord is not recommended. If an extension cord is absolutely necessary, a 13-ampere-rated cord should be used. Cord rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.
- Never yank cord to disconnect from outlet, instead, grasp plug and pull to disconnect.
- Use with caution when carrying steamer as it contains hot water.

NOTE: When first using the device, it is recommended to test on an old cloth or operate the steamer for 5 minutes, as there may be sediment left from the manufacturing process or transportation. Then unplug the unit and allow it to cool. Empty container and refill before actually using.

HOUSEHOLD USE ONLY

FILLING INSTRUCTIONS

- Make sure unit is unplugged.
- Place the unit on its back on a flat and stable surface.
- While holding the top of the water reservoir with one hand, and the other hand holding the steamer just below the head, pull the reservoir straight out.
- Open the inlet cover and fill the reservoir with tap water.
- Close the inlet cover and return the reservoir to its place, making sure that it snaps in place.

GET TO KNOW YOUR STEAMER

Anti-Calcification Filter

POWER Indicator Light



Setting Switch



3 Removable Attachments



Creaser
For Perfect Pleats And Folds



Bonnet
Helps Protect Delicate Fabrics



Silicone Band
Pulls Fabric Taut For Easier Steaming

OPERATING INSTRUCTIONS

- Your garment steamer has a built-in, anti-calcium filter. You may

- fill the water reservoir with tap water.
- Plug the unit into the electrical outlet.
- Press the power button; the light will start to flash. Allow approximately 60 seconds for the unit to warm up. The appliance is ready to use when the flashing light turns solid.
- Pointing the steam jets away from you, and anyone else in the room, select the steam rate by pressing the button on the back of the steamer to either HI or LOW.
Always have steam facing away from you or anyone in the room.
- Always keep the steamer in motion and about one inch from the surface of the item being steamed.
- When first using the device, test it on an old cloth, as there may be sediment left from the manufacturing process or transportation.
- On the back of the steamer there is a switch for HI and LOW settings. HI is for heavier and badly wrinkled fabric and provides faster results. LOW should be used for delicate fabrics in combination with the delicate bonnet attachment.
- To stop the flow of steam, move the switch to the middle position for OFF.
- Unplug the device when it is not in use.

IMPORTANT OPERATING INSTRUCTION

It is normal for water to condensate on sole plate until the steamer has been on for 3 to 5 minutes. To prevent water spotting, keep the unit moving and about one inch away from the fabric.

ANTI-CALC SYSTEM

A resin filter inside the water reservoir softens the water scale and prevents scale buildup. The filter is permanent and does not need replacing.

USING ATTACHMENTS

With the garment steamer off and cool, insert the tab on the creaser attachment into the underside of the garment steamer head. The silicone band and steam bonnet attachments snap into the top portion of the creaser attachment. To apply one of these attachments, simply line up the pins with the holes on the creaser attachment and push in until you hear a snap.

CAUTION: Use extreme care when changing the attachments after the unit has been in use, as the steam head will continue to be hot.

STEAMING TIPS FOR DE-WRINKLING

- To prepare your fabric for steaming, hang your garment or fabric.
NOTE: Avoid using metal clothes hangers, if possible.
- Pass the steam jets just above the fabric where the wrinkles are. It may take a few passes to remove the wrinkles completely.

CAUTION: When hanging garment on a door while steaming, be careful not to damage the door with steam.

- First test unit on an inconspicuous area of the item to be steamed using the LOW setting to ensure fabric can tolerate the effects of steam. If there is no evidence of damage, you can

proceed to use the steamer on that item.

- When steaming, always keep the unit in motion and about one inch from the surface of the item being steamed to avoid potential damage. Do not continuously hold steamer over an area or touch steamer jets directly to fabric, as this can cause spotting or damage, including shrinkage, melting, or color shift to certain types of material.
- In the case of heavier, durable fabrics, such as wool coats or bedding, slower passes with the steamer may be necessary to achieve desired results. As always, start by testing on an inconspicuous area of the item to be steamed using the LOW setting to ensure fabric can tolerate the effects of steam, and adjust your technique as needed to obtain the results desired.
- After use, unplug steamer and empty any remaining water from the tank to avoid leakage.

CLEANING/STORING/MAINTENANCE

- After use – wait for it to cool down before cleaning and then remove any water left in water tank.
- Allow the water tank to dry thoroughly.
- Keep this garment steamer out of reach of babies and children.
- Do not wrap the power cord around the unit and ensure it is stored without twisting or folding it.
- For the best performance, limescale should be removed from time to time.

ONE YEAR LIMITED WARRANTY

This Conair Appliance is guaranteed for consumer use for one year. This guarantee is no longer valid in case of alteration or repair by any unauthorized persons and only covers defects under normal use from the date of purchase. If your product does not perform satisfactorily because of defects in materials or manufacture, it will be repaired or replaced under Consumer Dispute Settlement Regulation of Fair Trade Commission.


THE DATE CODE MENTIONED

WWYYXXX was mentioned on unit as manufactured date so you can see W as week and Y as year for your reference.

CONTINENTAL CONAIR LIMITED CHINA CREATIVE DEPARTMENT

Date	12/06/19
Customer	CKTL
Model No.	GS39K
Description	IB
Job No.	19CFxxx
Reference No.	IB-19/577
Revision No.	9
Color	1C+1C(Black)
Open Size	460mm(W) X 214mm(H)
Folded Size	92mm(W) X 214mm(H)
Material	80gsm Artpaper
Prepared by	Betty Bai
Approved by	Jimmy Ng / Jay Joen
Vendor	Millplan
Supplier	

折叠方法
Folding method:
10 pages (5 x 2)

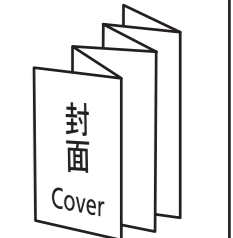

CONAIR KOREA TRADING LIMITED

#1304-1306 Seoul Soop Dream Tower, 66 Seongsui-ro, Seongdong-gu, Seoul, Korea
A/S: 1899-0209

GS39K

IB-19/577

CONAIR 익스트림 스팀 핸디형 스티머

주요 안전 사항

제품 사용 시 특히 어린이가 있을 경우 다음의 안전 주의사항을 반드시 준수하십시오.

사용 전 반드시 사용설명서를 숙지하여 주십시오. 물에 접촉하거나 빠뜨리시면 안됩니다.

안전주의

경고: 제품 포장에 사용된 폴리에틸렌 재질의 포장재는 어린이가 사용하기에 위험 하오니 어린이의 손이 닿지 않는 안전한 곳에 두십시오. 유아 및 어린이 침대, 유모차, 하이체어, 어린이 놀이 지역 안에서는 절대 사용하지 마십시오. 얇은 막의 필름이 코나 입에 붙어 질식을 유발할 수 있습니다. 포장재는 장난감이 아닙니다.



경고: 이 제품을 욕조, 샤워기, 세면대 등 물이 닿기 쉬운 곳에서 사용하지 마십시오.

- 부득이 욕실 등 물이 있는 곳에서 사용하실 경우, 사용 후 반드시 플러그를 뽑아 주십시오. 전원 스위치가 꺼져 있더라도 본 제품이 물 가까이에 있을 경우 위험할 수 있습니다. 보다 안전한 사용을 위하여 욕실에 누전차단기를 설치하시기를 권장하며 욕실의 잔류 전류 용량은 30mA 이하여야 합니다. 욕실 등에서 사용시 위 사항을 참조하여 전문가와 상의하시기 바랍니다.
- 본 제품을 절대로 물 또는 다른 액체에 담그거나 빠뜨리지 마십시오.
- 전원코드가 손상된 경우 사용을 중단하시고 위험 방지를 위해 반드시 서비스 센터에 연락하여 수리를 받으셔야 합니다.
- 제품을 떨어뜨리셨거나 제품에 손상 및 파손이 보이는 경우 절대 사용하지 마십시오.
- 스위치를 켜 두거나 플러그를 꽂아둔 상태에서 자리를 비우지 마십시오.
- 사용 중 문제가 생기면 바로 플러그를 뽑으십시오.
- 본 매뉴얼에 기술된 목적으로만 본 제품을 사용하고 제조사에서 권고하지 않은 부품이나 액세서리를 절대 사용하지 마십시오.
- 물을 채우거나 청소 하기 전 플러그를 뽑으십시오.
- 본 제품은 영유아, 어린이, 심신박약자, 심신상실자, 정신질환자, 사용 경험이 없거나 사용이 미숙한 사람 등에 의해 사용되어서는 안되며, 사용시엔 반드시 안전을

책임질 수 있는 보호자의 지도하에 사용하도록 합니다. 특히 어린이가 장난감처럼 사용하지 않도록 각별한 주의 바랍니다.

- 제품 사용이 끝나면 식힌 후 보관하십시오.
- 코드 손상을 막기 위해 코드를 제품에 감지 마시고, 꼬이거나 접히지 않도록 보관하십시오.
- 뜨거운 스팀이 방출되어 화상의 위험이 있으니 제품을 피부나 눈을 향해 사용하지 마십시오. **주의:** 사용 중 스팀 분출구를 통해 뜨거운 스팀이 나오므로 절대로 사람이나 동물을 향해 사용하지 마시고, 가능한 몸에서 멀리 떨어져 사용하십시오.
- 입고 있는 옷을 스팀 다리질 하지 마십시오.
- 스팀, 가열된 물, 금속 부분으로부터 화상을 입을 수 있습니다. 제품을 거꾸로 들지 마십시오.
- 멀티 탭 등 전원 연결선 사용은 권장하지 않습니다. 멀티탭을 사용할 수 밖에 없을 경우는 13암페어 이상의 제품을 사용하시기 바랍니다.
- 전원코드 선을 잡아당겨 플러그를 뽑지 마십시오.
- 작동 중에는 본체 안의 물이 가열되어 뜨거우니 주의하십시오.

주의: 구매 후 처음으로 사용 전 반드시 옷 안쪽의 보이지 않는 곳 혹은 입지 않는 옷 등에 스팀을 분사하여 옷감의 이염 및 손상 여부 혹은 제조 및 배송과정에서 생긴 불순물이 나오는지 확인 하신 후 사용하시기 바랍니다. 또한 배송 중 온도차로 인해 물통에 물방울이 맺혀 있을 수 있으나 제품이상이 아닙니다.

본 제품은 가정용입니다.

물통 채우는 방법

- 플러그를 뽑았는지 확인하십시오.
- 물통 윗면의 양 모서리를 잡아주십시오.
- 물통을 앞으로 당겨 본체에서 분리하십시오.
- 물통 상단의 마개를 열어 적당량의 물을 넣어주십시오. 본 제품은 석회 퇴적 방지 필터가 내장되어 있어 일반 수도물 사용이 가능하나, 일부 석회가 많이 포함된 수도물이 나오는 지역에서는 정제된 물을 사용하시길 권장합니다.
- 적당량의 물을 채워 물통 상단의 주입구를 잘 막고, 본체에 밀착시킨 후, 물통을 딸깍소리가 날 때까지 본체에 완전히 부착하여 주십시오. 제대로 부착 되었는지 꼭 확인 하십시오.

제품 설명



스팀 다리미 사용법

- 사용 전 물통에 적당량의 물을 채워 주십시오. *본 기기에는 석회 퇴적 방지 필터가 장착되어 있습니다.
- 전원 코드를 플러그에 꽂아 주십시오.
- 스티머 헤드의 전원버튼을 누르면 전원/에열 표시등이 깜빡입니다. 60초 후 에열이 완료되면 표시등이 깜빡임을 멈춥니다.
- 스팀 분출구를 사용자를 포함한 사람이나 동물이 없는 곳으로 향하게 한 후 원하시는 스팀강도(HI 혹은 LOW)에 맞춰 사용하십시오. **스팀 다리미 사용 시에는 항상 화상에 주의하시기 바랍니다.**
- 스팀 분사구가 옷감/패브릭에서 약 3cm정도 떨어진 상태에서 계속해서 움직이며 스팀이 고르게 달을 수 있도록 하십시오.
- 주의: 구매 후 처음 사용할 때에는 제조 및 배송 과정에서 생긴 불순물이 나올 수 있으니 입지 않는 옷이나 오래된 천, 혹은 옷감 안쪽의 보이지 않는 곳에 테스트하여 이염 및 손상**

여부를 확인하신 후 사용하십시오.

- 스티머 헤드 뒷편에 있는 온도 설정(HI/LOW)스위치를 사용하여 옷감 및 주름강도에 따라 사용하실 수 있습니다. HI스팀: 강한 주름이나 두께감이 있는 옷/섬유, LOW스팀: 얇고 섬세한 옷/원단(섬유 보닛과 함께 사용하시면 더욱 옷감을 안전하게 보호할 수 있습니다)
- 사용 중 스팀을 멈추고자 할 때에는 스티머 뒤쪽의 스위치를 중앙의 OFF에 맞춰주십시오.
- 사용 후에는 전원버튼을 눌러 전원을 끈 후 전원 코드를 뽑은 상태에서 기기를 완전히 식혀 주십시오.

사용상 주의 사항

스팀 분사가 시작된 후 약 3~5분 정도 열판에 물방울이 생길 수 있으나 열판 온도가 올라가며 이러한 현상은 없어집니다. 다만 초기 사용 시 옷감에 물자국이 남는 것을 방지하기 위해 옷감/섬유로부터 약 3cm의 간격을 두고 스팀 분사가 한 곳에 집중되지 않도록 기기를 움직이며 사용하십시오.

석회 퇴적 방지 필터

물통 안에 위치한 반 영구적 석회 퇴적 방지 필터가 석회 및 침전물을 걸러주어 강력한 스팀 성능 유지 및 사용 수명 연장을 도와줍니다.

액세서리 안내

- 크리저: 집게 형태로 바지나 와이셔츠의 칼주름을 잡는데 도움이 됩니다.
- 실리콘 브러시: 다리질을 쉽게 할 수 있도록 옷감을 팽팽하게 당겨줍니다.
- 섬유 보닛: 섬세한 옷감에 강력한 스팀이 직접 닿지 않도록 옷감을 한번 더 보호해줍니다.

액세서리는 반드시 스팀 다리미의 전원이 꺼져 있고 스티머헤드가 식어 있는 상태에서 부착 및 탈착하십시오. 크리저를 스티머 헤드 하단의 구멍에 끼워 단독으로 사용하시거나 크리저 상단에 실리콘 브러시 혹은 섬유 보닛을 끼워 사용 하실 수 있습니다.

경고: 스팀 다리미 사용 중 액세서리를 부착하거나 교체하지 마십시오. 또한 전원이 꺼져있는 상태라도 화상 위험이 있으니 스티머 헤드가 충분히 식었는지 반드시 확인하십시오.

사용 팁

- 스팀 다리질이 필요한 옷이나 패브릭을 옷걸이에 걸어 준비하십시오 **주의:** 강력한 스팀으로 부식되거나 옷감에 손상을 줄 수 있으니 철제 옷걸이의 사용은 피하여 주십시오.
- 스티머를 구김이 있는 옷감의 위에서 아래방향으로

움직이며 스팀이 고르게 달도록 하십시오. 구김이 심할 경우 여러번 동작을 반복하십시오.

경고: 옷감을 방문이나 옷장 문에 걸어서 다리질 할 경우 고온의 스팀으로 후면의 방문 및 옷장 문이 손상 될 수 있으니 주의 하십시오.

- 처음 사용하실 경우 옷감이 스팀에 의해 손상 및 이염되지 않는지 안쪽의 눈에 띄지 않는 곳에 LOW설정으로 테스트 하신 후 사용 하십시오. 손상 및 이염이 없는 경우 해당 옷감이나 섬유에 스티머를 사용하십시오.
- 스팀 다리질을 할 때 한 곳에만 수 초 이상 스팀을 가할 시 옷감의 수축, 이염, 늘어붙음 등의 손상을 유발할 수 있으니 옷감의 표면에서 약 3cm정도 거리를 두고 지속적으로 움직임을 유지 하십시오.
- 겨울 코트나 침구류와 같이 단단하고 두꺼운 옷감에 사용할 경우 보다 천천히 움직여 스팀이 효과적으로 작용할 수 있도록 하십시오. 또한 반드시 사용 전 LOW 설정으로 사용 전 눈에 잘 띄지 않는 안쪽 부분에 먼저 테스트하여 스팀으로 인한 손상이 없는지 확인하십시오.
- 사용 후에는 전원을 끄고 전원 코드를 뽑은 후 물통에 남아있는 물을 완전히 비우고 말려 주십시오. 열판이 충분히 식은 후 어린이의 손이 닿지 않는 곳에 보관하십시오.

세척/보관/유지

- 사용 후 스티머 열판이 완전히 식은 후 물통을 꺼내 남은 물을 모두 버려 주십시오.
- 물통에 물기가 남지 않도록 완전히 말려 주십시오.
- 보관시에는 어린이나 노약자의 손이 닿지 않는 곳에 놓아 주십시오.
- 제품에 전원 코드를 감아서 보관하지 마십시오.
- 스팀 다리미의 성능 유지 및 얼룩/물때 방지를 위해 수시로 물때를 제거해 주십시오.

1년 보증기간

본 제품의 보증기간은 1년입니다. 본 제품은 공정거래위원회 고시 소비자분쟁해결기준에 의거 교환 또는 보상받을 수 있으며 정상적인 제품 사용 도중 발생한 제품 하자의 경우에만 보상이 가능합니다.

제조일 표기

제조일은 본 제품에 WWYYXX형태로 표기되어 있습니다. W 는 '주', Y는 '년도 ' 를 나타냅니다.

A/S 및 제품 문의

콘에어코리아트레이딩 주식회사
서울시 성동구 성수일로 66 서울숲드림타워 1304~1306호
홈페이지: www.conair.co.kr

A/S 대표 번호: 1899-0209
www.fillelec.co.kr