

## 2 IN 1 IRON & STEAMER

### 듀얼스팀엣지 DUAL STEAM EDGE



INSTRUCTION  
BOOKLET  
사용설명서

# CONAIR®

GS1200K

#### IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

#### READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

#### SAFETY PRECAUTIONS

**WARNING:** If the polyethylene bags are used on the product or its packaging, there may be dangerous. Keep these bags out of the reach of babies and children.

Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.

**WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

- If you are using the unit in a bathroom, unplug it after you have finished using it. Using the unit close to a source of water can, in fact, be dangerous, even if the unit is switched off. To ensure additional protection, have installed in your bathroom a residual current device (RCD) with a nominal trip current no higher than 30 mA. Ask your electrical fitter for advice.
- Never immerse the unit in water or any other liquid.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not use the unit if it has fallen or if it appears to be damaged.
- Do not leave the unit unattended when it is plugged in or switched on.
- Unplug the unit immediately if you have problems when using it.
- Do not use any accessories other than those recommended by manufacturer.
- Unplug the unit after each use and before filling or cleaning it.
- This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by persons who lack experience or knowledge, unless they are supervised or have been given instructions beforehand on the use of the unit by a person responsible for their safety. Children should be supervised to make sure they do not treat the unit like a toy.
- Allow the unit to cool before storing.
- To prevent damage to the cord, do not wrap it around the unit and ensure it is stored without twisting or folding it.
- When emitting steam, this appliance may cause burns if it is used too close to the skin or eyes, or if it is used incorrectly. To reduce the risk of contact with hot water emitting from the steam vents, test appliance



- Do not steam garments while on a person.
- Burns could occur from touching hot metal parts, hot water or steam. Use carefully when you turn steam appliance upside down.
- Do not operate appliance without correctly filling the water container. We recommend the use of distilled cold water only.
- Use of an extension cord is not recommended. If an extension cord is absolutely necessary, a 13-ampere cord should be used. Cord rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.
- Never yank cord to disconnect from outlet, instead, grasp plug and pull to disconnect.
- Use with caution when carrying appliance as it contains hot water.

**NOTE:** When first using the device, it is recommended to test on an old cloth or operate the appliance for 5 minutes, as there may be sediment left from the manufacturing process or transportation. Then unplug the unit and allow it to cool. Empty container and refill before actually using.

#### HOUSEHOLD USE ONLY

#### FILLING INSTRUCTIONS

- Make sure the unit is unplugged.
- Stand the unit on a table and grasp with one hand.
- Pull the reservoir out, away from the steamer body.
- The rubber inlet cover is located on the top of the water reservoir.
- Open the inlet cover and fill the reservoir with distilled water (which can be found in grocery stores). We recommend that you use distilled water only, as this will prevent mineral deposits in the boiler that can reduce performance or clog the water system.

**Please Note: DO NOT** use chemical additives, scented substances or decalcifiers in the water reservoir. Failure to comply with this regulation will lead to the loss of warranty.

#### GET TO KNOW YOUR GARMENT IRON 2 IN 1



#### OPERATING THE IRON

- Fill water reservoir with distilled water.
- Plug the unit into the electrical outlet.
- The POWER light will blink while heating. Allow approximately 35 seconds. The appliance is ready to use when the light is solid and no longer blinking.
- Point the steam jets away from you, and anyone else in the room. Press the steam button once to start steam. **Always have steam facing away from you or anyone in the room.**
- This steamer has a dry iron setting. Without pressing the STEAM button, the soleplate of the steamer will get hot to use as an iron.
- When first using the device, test on an old cloth, as there may be sediment left from the manufacturing process or transportation.
- To stop the flow of steam, press the steam button again.
- Unplug the device when it is not in use.

#### STEAMING TIPS

- Hang your garment or fabric. Note: Avoid using metal clothes hangers, if possible.
- Pass the steam jets about an inch above the fabric where the wrinkles are. It may take a few passes to remove the wrinkles completely.

- After use, unplug steamer and empty any remaining water from the reservoir to avoid leakage.
- CAUTION: When hanging garment on a door while steaming, be careful not to damage the door with steam.**
- First test unit on an inconspicuous area of the item to be steamed, to ensure fabric can tolerate the effects of steam. If there is no evidence of damage, you can proceed to use the steamer on that item.
- When steaming, always keep the unit in motion and about 2.5cm from the surface of the item being steamed to avoid potential damage. Do not continuously hold steamer over an area or touch steamer jets directly to fabric as this can cause damage, including shrinkage, melting, or color shift on certain types of material.
- In the case of heavier, durable fabrics, such as wool coats or bedding, slower passes with the steamer may be necessary to achieve desired results. As always, start by testing on an inconspicuous area of the item to be steamed, to ensure fabric can tolerate the effects of steam, and then adjust your technique as needed to obtain the results desired.

#### CLEANING/STORING/MAINTENANCE

- After use – wait for it to cool down before cleaning and then remove any water left in water tank.
- Allow the water tank to dry thoroughly.
- Keep this garment steamer out of reach of babies and children.
- Do not wrap the power cord around the unit and ensure it is stored without twisting or folding it.
- For the best performance, limescale should be removed from time to time.

**NOTE:** Minerals in water will vary in different areas. To ensure continued operation of the steamer, use only distilled water, never store without cleaning and removing excess water from the reservoir and water container.

#### ONE YEAR LIMITED WARRANTY

This Conair Appliance is guaranteed for consumer use for one year. This guarantee is no longer valid in case of alteration or repair by any unauthorized persons and only covers defects under normal use from the date of purchase. If your product does not perform satisfactorily because of defects in materials or manufacture, it will be repaired or replaced under Consumer Dispute Settlement Regulation of Fair Trade Commission.

#### THE DATE CODE MENTIONED

WWYYXXX was mentioned on unit as manufactured date so you can see W as week and Y as year for your reference.


#### CONAIR KOREA CUSTOMER SERVICE:

Conair Korea Trading Limited  
Customer Center: 1899-0209  
A/S Center: www.fillelec.co.kr

CONTINENTAL CONAIR LIMITED  
CHINA CREATIVE DEPARTMENT

Date	10/9/24
Customer	CKTL
Model No.	GS1200K
Description	IB
Job No.	
Reference No.	IB-24/282
Revision No.	9
Color	1C+1C(Black)
Open Size	552mm(W) X 214mm(H)
Folded Size	92mm(W) X 214mm(H)
Material	80gsm Artpaper
Prepared by	Betty Bai
Approved by	Ken Xiong/ Lynn Son
Vendor	Yueli
Supplier	

折叠方法  
Folding method:  
12 pages (6 x 2)

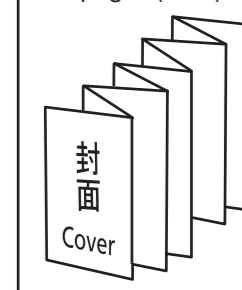

## 듀얼스팀오티지

### 중요 안전 지침

제품 사용 시, 특히 어린이가 있을 경우, 아래의 안전 수칙을 포함한 기본 안전 수칙을 반드시 준수하세요.

**사용 전에 반드시 사용설명서를 숙지해 주세요.  
제품이 물에 닿거나 빠지지 않도록 주의하세요.  
사용 후 반드시 플러그를 빼주세요.**

### 주의 사항

**경고:** 제품 포장에 사용된 폴리에틸렌 재질의 포장재는 어린이가 사용할 경우 위험할 수 있으니, 주의가 필요합니다.

이 포장재를 유아용 침대, 유모차 또는 놀이 공간에서 사용하지 마세요. 얇은 필름막이 코나 입에 붙어 유아나 어린이가 질식할 수 있습니다. 포장재는 장난감이 아닙니다.



- 화장실에서 사용할 경우, 사용 후 반드시 플러그를 빼주세요. 제품의 전원이 차단되어 있어도 물이 닿을 경우 위험할 수 있으니 안전을 위해 화장실에 누전차단기 설치를 권장합니다.
- 물 또는 액체에 절대 빠트리지 마세요.
- 전원 코드가 파손된 경우에는 위험요소를 피하기 위해 제조자나 그 대리점 또는 유자격자가 코드를 교체해야 합니다. 전원 코드가 파손된 경우 고객 상담실을 통해 상담하여 주세요.
- 제품에 이상이 있거나 손상된 것처럼 보이면 사용하지 마세요. 제품을 떨어뜨리거나 강한 충격을 주지 마세요.
- 스위치를 켜 두거나 전원플러그를 꽂아 둔 상태에서 자리를 비우지 마세요.
- 사용 중 문제가 생기면 바로 전원플러그를 뽑으세요.
- 제조사에서 권고하지 않은 기타 부속품들을 사용하지 마세요.
- 제품 사용 후 또는 청소하기 전에 반드시 전원 코드를 뽑으세요.
- 이 기기는 신체적, 감각적 또는 정신적 능력이 제한된 사람(어린이 포함)이나 경험 또는 지식이 부족한 사람이 사용하도록 만들어지지 않았습니다. 이들이 기기를 사용할 경우, 안전에 책임 있는 사람이 사용에 대해 지도하거나 감독해야 합니다. 어린이는 기기를 장난감으로 다루지 않도록 감독해야 합니다.
- 기기를 보관하기 전에 충분히 식히세요.
- 코드에 손상을 방지하려면, 기기에 코드를 감지 말고 비틀거나 접하지 않도록 보관하세요.
- 스팀이 나올 때 화상을 입을 수 있으니, 제품에 피부나 눈을 가까이 하지 마시고, 잘못된 방법으로 사용하지 마세요.

사용하기 전에는 꼭 제품을 몸에서 멀리 떨어뜨려 테스트 하실 것을 권장합니다.

- 옷을 입은 상태에서 스팀을 사용하지 마세요.
- 뜨거운 금속 부분, 뜨거운 물 또는 스팀에 접촉하면 화상을 입을 수 있으니 주의하세요.
- 물통을 제대로 채우지 않고 기기를 작동시키지 마세요. 증류수 또는 정제수만 사용할 것을 권장합니다.
- 연장 코드 사용은 권장하지 않습니다. 연장 코드가 반드시 필요하다면, 13암페어 정격의 코드를 사용해야 합니다. 낮은 정격의 코드는 과열될 수 있습니다. 코드를 배치할 때는 당기거나 걸리지 않도록 주의하세요.
- 플러그를 뽑을 때는 코드를 잡아당기지 말고 플러그를 잡고 뽑으세요.
- 제품을 옮길 때에는 뜨거운 물이 들어있으므로 주의하세요.

**참고:** 처음 사용할 때는, 제조 과정이나 운송 과정에서 남아 있을 수 있는 침전물을 제거해야 하니, 기기를 오래된 천으로 테스트하거나 5분 동안 작동시키는 것이 좋습니다. 그런 다음 플러그를 뽑고 식힌 후, 사용하세요. 물통 또한 모두 비운 후 다시 채워서 사용하시기를 권장합니다.

### 가정용으로만 사용하십시오.

### 물통 채우기 사용법

- 기기의 플러그가 뽑혀 있는지 확인하세요.
- 기기를 테이블 위에 놓고 한 손으로 잡으세요.
- 다리미 본체에서 물통을 잡아당겨 분리하세요.
- 물통 상단에 고무 주입구 덮개가 있습니다.
- 주입구를 열어 정제수를 넣으세요. 정제수만 사용할 것을 권장합니다. 이는 미네랄 침전물이 쌓이는 것을 방지하여 성능 저하나 막힘 현상을 예방할 수 있습니다.

**경고:** 물통에 향수나 식초, 석회 제거제 등 다른 첨가물을 넣지 마세요. 이 규정을 지키지 않으면 제품을 보증할 수 없습니다.

## 2in1 다리미 사용법



### 열다리미 사용 방법

- 물통에 정제수를 채워주세요.
- 제품의 전원 플러그를 전원 콘센트에 꽂으세요.
- 전원 표시등이 깜빡거릴 때까지 기다리세요. 약 35초가 소요됩니다. 표시 등의 깜빡거림이 멈추어 고정되면 기기를 사용할 준비가 된 것입니다.
- 스팀 분출구를 본인이나 타인에게 향하지 않도록 하세요. 스팀 버튼을 한 번 누르면 스팀이 나옵니다. 스팀은 항상 자신이나 다른 사람에게 향하지 않도록 하세요.
- 열판 다리미로도 사용이 가능합니다. 스팀 버튼을 누르지 않으면, 열판 부분이 뜨거워져 다림질을 하실 수 있습니다.
- 처음 사용할 때는 제조나 운송과정에서 남아 있을 수 있는 침전물을 제거하기 위해 사용하지 않는 천으로 테스트하세요. 스팀을 멈추시려면 스팀 버튼을 다시 누르세요.
- 기기를 사용하지 않을 때는 플러그를 뽑으세요.

### 스팀 사용 팁

- 옷이나 천을 걸어드세요.  
**참고:** 금속 옷걸이 사용은 권장하지 않습니다.
- 주름이 있는 부분의 약 2.5cm위에서 스팀을 통과시킵니다. 칼주름을 원하신다면 이 동작을 여러 번 반복 하세요.
- 사용 후 제품의 플러그를 뽑고 물통에 남아 있는 물을 비워 누출을 방지하세요.

- 주의:** 문에 의류를 걸고 스팀을 사용할 때, 문이 스팀으로 인해 손상되지 않도록 주의하세요.
- 스팀을 사용하기 전에 눈에 띄지 않는 부분에서 먼저 테스트하세요. 이는 천이 스팀으로 손상이 발생하지 않는지를 확인하기 위함입니다. 손상이 없는 경우 스팀을 사용하시면 됩니다.
- 스팀을 사용할 때는 다리미를 움직여 옷의 표면에서 약 2.5cm 떨어뜨려 사용해 잠재적인 손상을 방지하세요. 스팀 분출구를 한 곳에 계속 두거나 천에 직접 접촉시키면 특정 재질의 경우 손상(예: 수축, 녹음, 변색 등)이 발생할 수 있습니다.
- 울 코트나 침구와 같은 무거운 내구성의 소재를 다릴 시, 제품을 천천히 움직이세요. 처음 사용할 때는 눈에 띄지 않는 부분을 테스트하여 천이 손상되는지를 확인하고 사용하세요.

### 청소/보관/유지 관리

- 사용 후 기기가 식을 때까지 기다린 후 청소하고, 물통에 남아 있는 물을 제거하세요.
- 물통을 완전히 건조 시키세요.
- 제품을 아기와 어린이의 손이 닿지 않는 곳에 보관하세요.
- 전원 코드를 기기에 감지 말고 비틀거나 접하지 않도록 보관하세요.
- 최적의 성능을 위해서 석회를 제거해야 합니다.

**참고:** 물에 포함된 미네랄은 지역에 따라 다릅니다. 스티머의 지속적인 작동을 보장하기 위해 정제수만 사용하고, 청소 및 물통에서 남은 물을 제거한 후 보관하세요.

### 1년 보증기간

본 제품의 보증기간은 1년입니다. 본 제품은 공정거래위원회 고시 소비자분쟁해결기준에 의거 교환 또는 보상받을 수 있으며 무단으로 수리하다가 고장이 발생한 경우 이 보증은 유효하지 않으며, 정상적인 제품 사용 도중 발생한 제품 하자의 경우에만 보상이 가능합니다.

### 기기에 기재된 날짜 코드

WWYYXXX는 제조 날짜를 나타내며, W는 주, Y는 년도를 의미합니다.

### 콘에어 코리아 고객센터

Conair Korea Trading Limited  
고객 센터: 1899-0209  
A/S 센터: www.fillelec.co.kr