HANDHELD FABRIC STEAMER

콘에어 퀵&스무스 핸디형 스티머

INSTRUCTION
BOOKLET
사용설명서

CONAIR®

GS55K

# CONAIR HANDHELD FABRIC STEAMER

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

**READ ALL INSTRUCTIONS BEFORE USING**
***KEEP AWAY FROM WATER***

## SAFETY PRECAUTIONS

**WARNING:** The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children.
Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.

**WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

1. If you are using the unit in a bathroom, unplug it after you have finished using it. Using the unit close to a source of water can, in fact, be dangerous, even if the unit is switched off. To ensure additional protection, have installed in your bathroom a residual current device (RCD) with a nominal trip current no higher than 30 mA. Ask your electrical fitter for advice.
2. Never immerse the unit in water or any other liquid.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. Do not use the unit if it has fallen or if it appears to be damaged.
5. Do not leave the unit unattended when it is plugged in or switched on.
6. Unplug the unit immediately if you have problems when using it.
7. Do not use any accessories other than those recommended by manufacturer.
8. Unplug the unit after each use and before filling or cleaning it.
9. This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by persons who lack experience or knowledge, unless they are supervised or have been given instructions beforehand on the use of the unit by a person responsible for their safety. Children should be supervised to make sure they do not treat the unit like a toy.
10. Allow the unit to cool before storing.
11. To prevent damage to the cord, do not wrap it around the unit and ensure it is stored without twisting or folding it.
12. When emitting steam, this appliance may cause burns if it is used too close to the skin or eyes, or if it is used incorrectly. To reduce the risk of contact with hot water emitting from the steam vents, test appliance before use by holding it away from the body.
13. Do not steam garments while on a person.
14. Burns could occur from touching hot metal parts, hot water or steam. Use care when you turn steam appliance upside down.
15. Do not operate steamer without correctly filling the water container. Only use clean cold water for filling this appliance. We recommend the use of distilled or purified cold water only.
16. Use of an extension cord is not recommended. If an extension cord is absolutely necessary, a 13-ampererated cord should be used. Cord rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.
17. Never yank cord to disconnect from outlet, instead, grasp plug and pull to disconnect.
18. Use with caution when carrying steamer as it contains hot water.

**NOTE:** When first using the device, it is recommended to test on an old cloth or operate the steamer for 5 minutes , as there may be sediment left from the manufacturing precess or transportation. Then unplug the unit and allow it to cool. Empty container and refill before actually using.

## HOUSEHOLD USE ONLY

## FILLING INSTRUCTIONS

1. Make sure the unit is unplugged.
2. Stand the unit on a table and grasp with one hand.
3. With other hand, pull the reservoir out, away from the steamer body.
4. The rubber inlet cover is located on the top of the water reservoir.
5. Open the inlet cover and fill the reservoir with distilled water (which can be found in grocery stores). We recommend that you use distilled water only as this will prevent mineral deposits in the boiler that can reduce performance or clog the water system.
6. Close the inlet cover and return the reservoir to its place, making sure that it snaps in place and is secure.

## GET TO KNOW YOUR STEAMER

## OPERATING INSTRUCTIONS

1. Fill water reservoir with cool, distilled water.
2. If you are using an attachment, place it on the steamer.
3. Plug the unit into the electrical outlet.
4. Pointing the steam jets away from you, and anyone else in the room, press ⏻ power button on. When ready light illuminates, press the ♧ steam button to emit steam. **Always have steam facing away from you or anyone in the room.**
5. To stop the flow of steam, press ♧ steam button again.
6. Press ⏻ power button to turn unit off. Unplug the device when it is not in use.

## STEAMING TIPS

1. First, test unit on an inconspicuous area of the item to be steamed, if there is no evidence of damage, you can proceed to use the steamer on that item.
2. Hang your garment or fabric.
3. Press the ⏻ power to turn the steamer on.
4. Use the ♧ steam button to steam.
5. Hold fabric taut with one hand and hold steamer with the other hand.
6. Pass the steam jets just above the fabric, where the wrinkles are. It may take a few passes to remove the wrinkles completely.
7. After use, turn steamer off. Allow unit to cool, and unplug from outlet. Empty any remaining water from the tank prior to storing to avoid leakage.
8. **CAUTION:** When hanging garment on a door while steaming, be careful not to damage the door with steam.
9. When steaming, always keep the unit in motion. Do not continuously hold steamer over an area or touch steamer jets directly to fabric for more than a few seconds as this can cause damage, including shrinkage, melting, or color shift on certain types of material.
10. In the case of heavier, durable fabrics such as wool coats or bedding, slower passes with the steamer may be necessary to achieve desired results. As always, start by testing on an inconspicuous area of the item to be steamed to ensure fabric can tolerate the effects of steam, and adjust your technique as needed to obtain the results desired.

## USING ATTACHMENT

Make sure garment steamer off and cool. Put the attachment and lock at top side on the garment steamer head first. So, apply a small force to push the attachment at bottom side and let snap of the attachment and slot of garment steamer head in position. To release the attachment, hold the tongue of the attachment at the bottom side and pull it out. **CAUTION: Don't change the attachment when the garment steamer is in use and hot. Hot garment steamer head may burn your skin even if the attachment is cool.**

## 3-IN-1 MULTI POUCH

- For Storage: store the device after cool down the garment steamer and empty water tank.
- For Mitten: fit your fingers into inside elastic band. This heat-resistant pouch protects your hand and helps to hold garment or fabric during use.
- For Ironing pad: use on any surface for press ironing or horizontal using.

## CLEANING/STORING/MAINTENANCE

- After use – wait for it to cool down before cleaning and then remove any water left in water tank.
- Allow the water tank to dry thoroughly.
- Keep this garment steamer out of reach of babies and children.
- Do not wrap the power cord around the unit and ensure it is stored without twisting or folding it.
- For the best performance, limescale should be removed from time to time.

Note: Minerals in water will vary in different areas. To insure continued operation of the steamer, use only purified/distilled water, never store without cleaning and removing excess water from the reservoir and water container.

## ONE YEAR LIMITED WARRANTY

This Conair Appliance is guaranteed for consumer use for one year. This guarantee is no longer valid in case of alteration or repair by any unauthorized persons and only covers defects under normal use from the date of purchase. If your product does not perform satisfactorily because of defects in materials or manufacture, it will be repaired or replaced under Consumer Dispute Settlement Regulation of Fair Trade Commission.

## THE DATE CODE MENTIONED

WWYYXXX was mentioned on unit as manufactured date so you can see W as week and Y as year for your reference.

**CONAIR KOREA TRADING LIMITED**

#1304~1306 Seoul Soop Dream Tower, 66 Seongsui-ro,
Seongdong-gu, Seoul, Korea
A/S: 1899-0209



**CONTINENTAL CONAIR LIMITED**
**CHINA CREATIVE DEPARTMENT**

| | |
|---|---|
| **Date** | 9/19/19 |
| **Customer** | CKTL |
| **Model No.** | GS55K |
| **Description** | IB |
| **Job No.** | 19CF027 |
| **Reference No.** | IB-19/489 |
| **Revision No.** | 9 |
| **Color** | 1C+1C(Black) |
| **Open Size** | 460mm(W) X 214mm(H) |
| **Folded Size** | 92mm(W) X 214mm(H) |
| **Material** | 80gsm Artpaper |
| **Prepared by** | Betty Bai/Nancy Lin |
| **Approved by** | Jimmy Ng / Jay Joen |
| **Vendor** | TK |
| **Supplier** | |
| | |

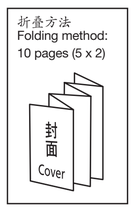

# CONAIR 퀵&스무스 핸디형 스티머

## 주요 안전 사항

제품 사용 시 특히 어린이가 있을 경우 다음의 안전 주의사항을 반드시 준수하십시오.

**사용 전 반드시 사용설명서를 숙지하여 주십시오. 물에 접촉하거나 빠뜨리시면 안됩니다.**

## 안전주의

**경고:** 제품 포장에 사용된 폴리에틸렌 재질의 포장재는 어린이가 사용하기에 위험 하오니 어린이의 손이 닿지 않는 안전한 곳에 두십시오. 유아 및 어린이 침대, 유모차, 하이체어, 어린이 놀이 지역 안에서는 절대 사용하지 마십시오. 얇은 막의 필름이 코나 입에 붙어 질식을 유발할 수 있습니다. 포장재는 장난감이 아닙니다.

**경고:** 이 제품을 욕조, 샤워기, 세면대 등 물이 닿기 쉬운 곳에서 사용하지 마십시오.

1. 부득이 욕실 등 물이 있는 곳에서 사용하실 경우, 사용 후 반드시 플러그를 뽑아 주십시오. 전원 스위치가 꺼져 있더라도 본 제품이 물 가까이에 있을 경우 위험할 수 있습니다. 보다 안전한 사용을 위하여 욕실에 누전차단기를 설치하시기를 권장하며 욕실의 잔류 전류 용량은 30mA 이하여야 합니다. 욕실 등에서 사용시 위 사항을 참조하여 전문가와 상의하시기 바랍니다.
2. 본 제품을 절대로 물 또는 다른 액체에 담그거나 빠뜨리지 마십시오.
3. 전원코드가 손상된 경우 사용을 중단하시고 위험 방지를 위해 반드시 서비스 센터에 연락하여 수리를 받으셔야 합니다.
4. 제품을 떨어뜨리셨거나 제품에 손상 및 파손이 보이는 경우 절대 사용하지 마십시오.
5. 스위치를 켜 두거나 플러그를 꽂아둔 상태에서 자리를 비우지 마십시오.
6. 사용 중 문제가 생기면 바로 전원을 끄고 플러그를 뽑으십시오.
7. 본 매뉴얼에 기술된 목적으로만 본 제품을 사용하시고 제조사에서 권고하지 않은 부속물을 사용하지 않습니다.
8. 물을 채우거나 청소 하기 전 플러그를 뽑으십시오.
9. 본 제품은 영유아, 어린이, 심신박약자, 심신상실자, 정신질환자, 사용 경험이 없거나 사용이 미숙한 사람 등에 의해 사용되어서는 안되며, 사용시엔 반드시 안전을 책임질 수 있는 보호자의 지도하에 사용하도록 합니다. 특히 어린이가 장난감처럼 사용하지 않도록 각별한 주의 바랍니다.
10. 제품 사용이 끝나면 식힌 후 보관합니다.
11. 코드 손상을 막기 위해 코드를 제품에 감지 마시고, 꼬이거나 접히지 않도록 보관합니다.
12. 뜨거운 스팀이 방출되어 화상의 위험이 있으니 제품을 피부나 눈을 향해 사용하지 마십시오. 주의: 사용 중 스팀 분출구를 통해 뜨거운 스팀이 나오므로 가능한 몸에서 멀리 떨어져 사용하십시오.
13. 입고 있는 옷을 스팀 다림질 하지 마십시오.
14. 스팀, 가열된 물, 금속 부분으로부터 화상을 입을 수 있습니다. 제품을 거꾸로 들 경우 조심하십시오.
15. 물통을 제대로 장착한 후 사용하십시오. 본 제품 사용 시 차가운 정수된 물 혹은 정제수 사용을 권장합니다. 수돗물 사용 시 석회가 쌓여 제품의 성능이 저하될 수 있습니다.
16. 멀티 탭 등 전원 연결선 사용은 권장하지 않습니다. 멀티탭을 사용할 경우에는 13암페어 이상의 제품을 사용하시기 바랍니다.
17. 전원코드 선을 잡아당겨 플러그를 뽑지 마십시오.
18. 작동 중에는 제품 내부에 가열된 물이 들어있으니 화상에 주의 하십시오.

**주의:** 구매 후 처음 사용하실 때에는 제조 및 출고 전 테스트 시 생긴 침전물이 나올 수 있으니 약 5분간 스팀을 충분히 발생시키거나, 입지 않는 옷이나 오래된 천에 쐬어 오염 여부를 확인한 후 사용하십시오.

## 본 제품은 가정용입니다.

## 물통 채우는 방법

1. 제품의 전원코드가 꽂혀있지 않고 전원이 꺼진 상태인지 확인 하십시오.
2. 물통 옆면의 양 모서리를 잡아주십시오.
3. 물통을 천천히 앞으로 당겨 본체에서 분리하십시오.
4. 물통 상단의 주입구 마개를 열어 정수물 혹은 정제수를 채워 주십시오. 석회질의 침전물이 발생해 스팀분출구를 막거나 제품의 성능저하를 유발 할 수 있으니 정제된 물을 사용하시길 권장하며, 수돗물의 사용을 자제 바랍니다.

5. 적당량의 물을 채워 물통 상단의 주입구를 잘 막고, 본체에 밀착시킨 후, 딸깍 소리가 날때까지 밀어서 본체에 부착하여 주십시오. 사용 전 물통이 제대로 부착되었는지 꼭 확인 하십시오.

**주의!** 본 제품을 처음 사용하시는 경우에는 반드시 옷감의 안쪽 등 잘 보이지 않는 곳에 스팀을 쐬어 옷감의 손상이나 탈색여부를 확인 하십시오. 두꺼운 코트, 수건, 이불 등 두꺼운 소재의 패브릭은 더 오랜 스팀시간 및 다림질이 필요할 수 있습니다. 스티머의 열판 부분은 매우 뜨거우니 절대로 실크 또는 벨벳 소재의 옷감에 직접 닿지 않게 주의하십시오.

## 제품 설명

## 스팀 다리미 사용법

1. 물통에 적당량의 물을 채우십시오. 액세서리를 사용하실 경우, 전원을 켜기 전에.
2. 만약 부속 부착하여 주십시오.
3. 전원코드를 플러그에 꽂아 주십시오.
4. 스팀 분출구를 사람이 없는 곳으로 향하게 한 후 전원 버튼 ⏻을 눌러 주십시오. 스팀 준비등이 깜빡임을 멈추면 스팀버튼 💧을 눌러 사용하십시오. **스팀 다리미 사용 시에는 항상 화상에 주의하시기 바랍니다.**
5. 사용 중 스팀을 멈추고자 할 때에는 스팀버튼 💧을 누르십시오.
6. 사용 후에는 전원버튼 ⏻을 눌러 전원을 끈 후 전원 코드를 뽑아 주십시오.

## 주름 펴기 팁

1. 사용 전 옷의 보이지 않는 곳에 먼저 스팀을 쐬어 옷감의 손상이나 변형이 없을 시 사용하십시오.
2. 스팀다림질이 필요한 옷이나 섬유를 옷걸이에 걸어 준비하십시오.
3. 전원버튼 ⏻을 눌러 주십시오.
4. 스팀준비등이 깜빡임을 멈추면 스팀버튼 💧을 눌러 주십시오.
5. 한 손으로 옷감의 끝을 잡아당겨 펴십시오.
6. 스티머를 위에서 아래 방향으로 움직이며 구김이 있는 옷감 위로 스팀이 고르게 분사되게 하십시오. 구김이 심할 경우 위 동작을 반복하여 스팀을 더 쐬어 주십시오.
7. 사용 후에는 전원을 끄고 전원 플러그를 뽑은 후 제품을 충분히 식혀 주십시오. 보관 중 물통에 보관된 물이 새거나 오염될 수 있으니 반드시 물통을 비운 상태로 보관하십시오.
8. **경고:** 옷감을 방문이나 옷장 문에 걸어 스팀 다림질을 할 경우 고온의 스팀으로 후면의 방문 및 옷장 문이 손상될 수 있으니 주의 하십시오.
9. 스팀 다림질을 할 때 옷감의 한 곳에만 수 초 이상 스팀을 가할 시 옷감의 수축, 이염, 녹아붙음 등의 손상을 유발할 수 있으니 지속적으로 움직임을 유지하여 주십시오.
10. 울 코트나 침구류과 같이 단단하고 두꺼운 옷감에 사용할 경우에는 보다 천천히 움직여 스팀이 효과적으로 작용할 수 있도록 하십시오. 또한 전체 면적에 스팀 다리미를 사용 전 눈에 잘 띄지 않는 안쪽 부분을 먼저 테스트하여 스팀으로 인한 손상이 없는지 확인하십시오.

## 액세서리 사용법

본 제품에는 액세서리 전용캡과 탈부착이 가능한 섬유 브러시팁과 실리콘 브러시팁이 제공됩니다.
반드시 액세서리 부착 전 제품의 전원이 꺼져있고 열판이 뜨겁지 않은 상태인지 확인하십시오.

1. 액세서리 캡을 열판 상단의 구멍에 먼저 끼운 후 캡의 하단을 살짝 눌러 열판 아래의 구멍에도 끼워 주십시오.
2. 캡의 상단에 추가로 섬유 브러시를 부착하여 사용하실 수 있습니다. (측면의 홈을 이용하여 밀어 넣어 주십시오.)
3. 사용 후에는 액세서리캡의 하단부를 잡아 아래쪽으로 살짝 당긴 후 앞쪽으로 빼내어서 분리하십시오.

**주의: 제품의 사용 중에는 화상의 위험이 있으니 절대로 액세서리를 부착하거나 제거하지 마십시오. 또한 액세서리 캡이 식은 후에도 열판의 열기가 지속되어 화상의 위험이 있으니 열판이 충분히 식은 후 제거하십시오.**

## 3-IN-1 멀티 내열 파우치

하나의 파우치로 보관/장갑/다림판으로 사용 가능합니다.

- 보관용 파우치: 제품 사용 후 열판을 충분히 식히고 물통의 물을 완전히 비운 후 파우치에 넣어 깔끔하게 보관가능 합니다.
- 다리미용 장갑: 내열 파우치 안쪽의 고무 밴드에 손가락을 끼워 다리미 장갑 처럼 사용할 수 있습니다.
- 미니 다림판: 언제 어디서나 원하시는 곳에 놓고 수평으로 다림질 할 수 있습니다.

## 세척/보관/유지

- 사용 후 스티머 열판의 열기가 완전히 식은 후 물통을 꺼내 남은 물은 바로 버려 주십시오.
- 물통에 물기가 남지 않도록 완전히 말려주십시오.
- 보관 시에는 어린이의 손이 닿지 않는 곳에 놓아주십시오.
- 제품에 전원코드를 감아서 보관하지 마십시오.
- 스팀 다리미 사용 시 물때나 석회로 인한 얼룩을 방지하기 위해 수시로 물때를 제거해 주십시오.

참고: 일반 수돗물의 경우 석회를 포함하고 있을 수 있으니 스팀 다리미의 성능을 유지하기 위해 반드시 정수된 물을 사용하시기를 권장하며 보관 시에는 항상 세척하고 잔여 수분을 제거하여 주십시오.

## 1년의 보증기간

본 제품의 보증기간은 1년입니다. 본 제품은 공정거래위원회 고시 소비자분쟁해결기준에 의거 교환 또는 보상받을 수 있으며 정상적인 제품 사용도중 발생한 제품 하자의 경우에만 보상이 가능합니다.

## 제조일 표기

제조일은 본제품에 WWYYXXX 형태로 표기되어 있습니다. W는'몇 째 주', Y는'몇 년도'를 나타냅니다.

## A/S 및 제품 문의

콘에어코리아트레이딩 주식회사
서울시 성동구 성수이로 66 서울숲드림타워 1304~1306호
A/S 대표 번호: 1899-0209
www.fillelec.co.kr